



N 1 - 2      NO Transfer Switch

N 3 NC E

N 4 NO EC

ES 1 NC Starts Engine (Agastat)

EN 1 NO N

EN 2 NC E & NE

EC 1 NC ES

NE 1 NO E

NE 2 NC N & ES

E 1 - 2 NO Transfer Switch

E 3 NC N

